


# PD-704-706-708-709-710-711 POWER CONVERTER INSTALLATION WIRING DIAGRAM

## RECOMMENDED MOUNTING LOCATION

Mount POWER CONVERTER in either the trunk or a large closet of the travel trailer. Preferable trunk dimensions are a depth of 8" or more by 28" or more height by 80" or more width. If closets are used, recommended closet dimensions are 18" or more depth by 24" or more width with at least a 5 ft. height. If locating POWER CONVERTER in smaller dimensions, it is recommended to install two - 4" louvered vents to prevent excessive heat buildup.

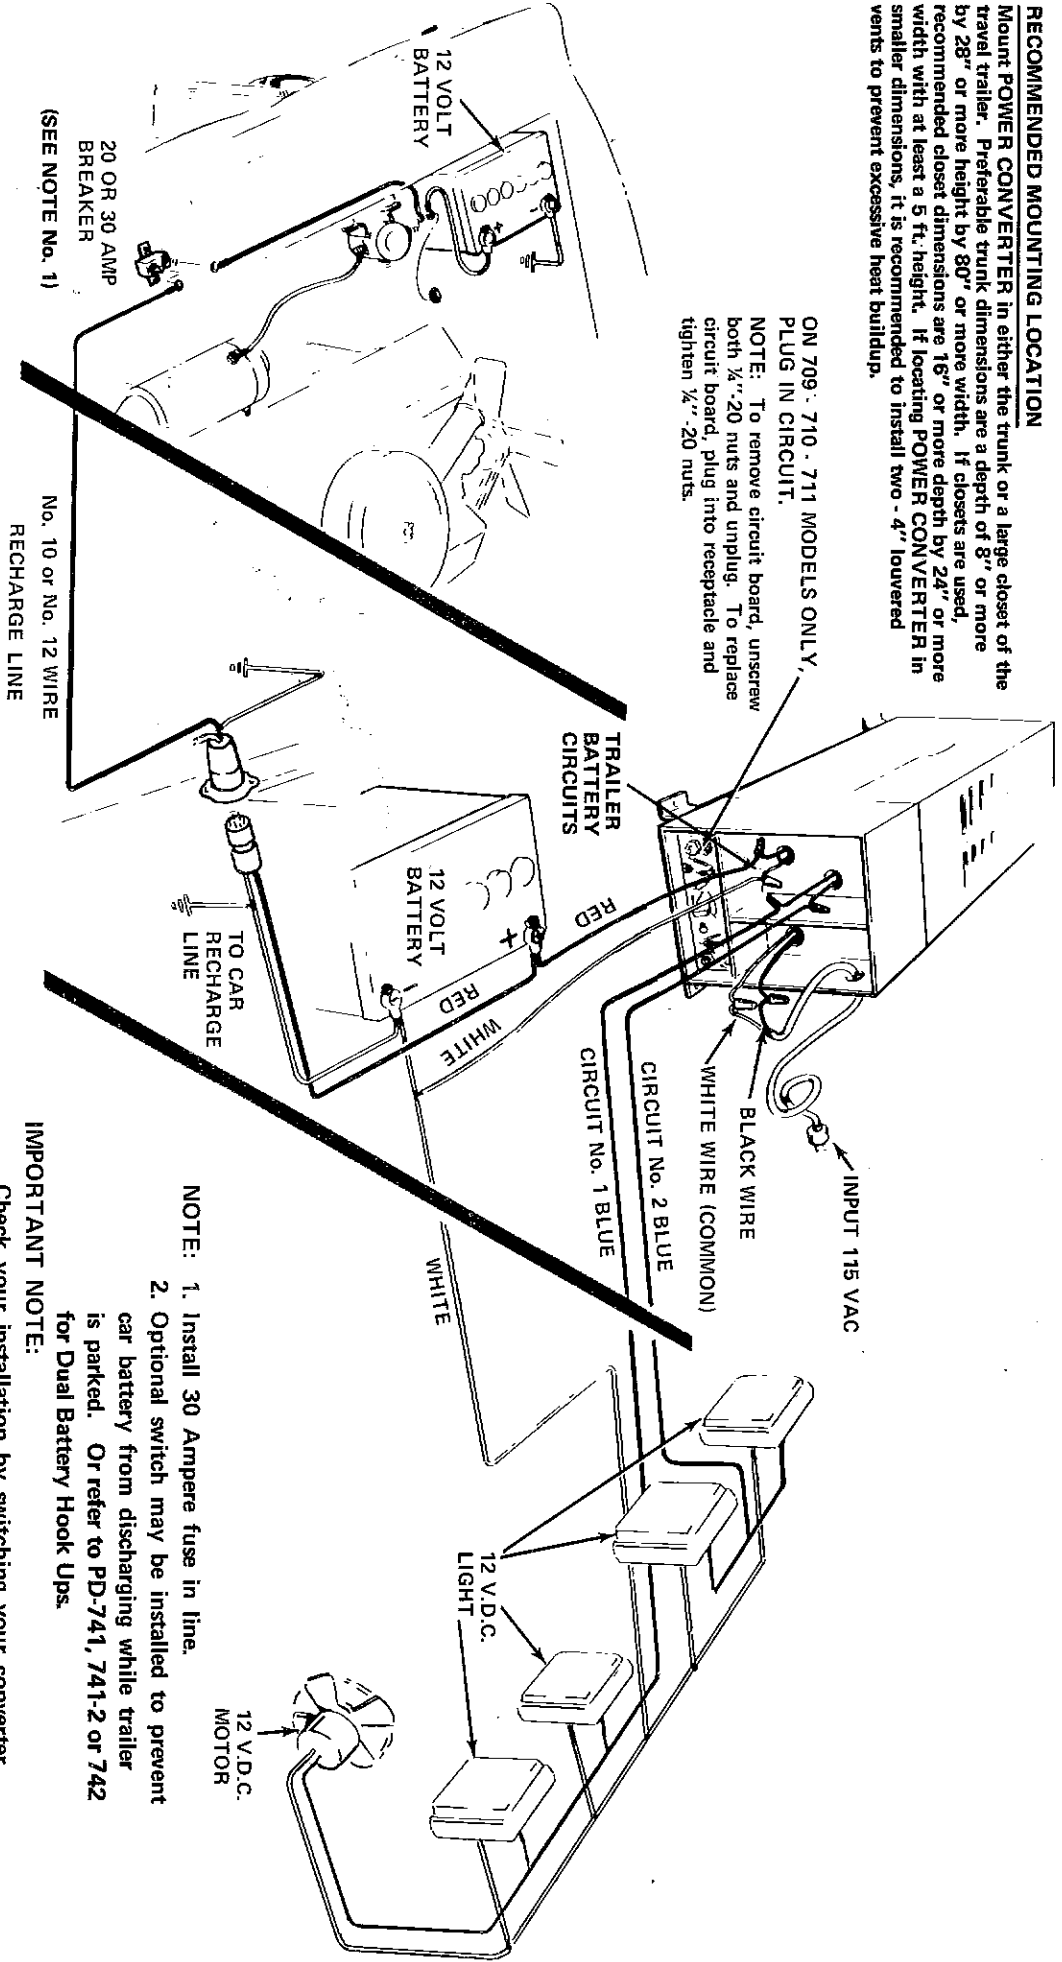

NOTE: 1. Install 30 Ampere fuse in line.

2. Optional switch may be installed to prevent car battery from discharging while trailer is parked. Or refer to PD-741, 741-2 or 742 for Dual Battery Hook Ups.

### IMPORTANT NOTE:

Check your installation by switching your converter to transformer position. If a short or overload is occurring, a 7 to 10 second clicking sound will be heard as the automatic reset breakers click on and off.

## PROGRESSIVE DYNAMICS, INC.



DP8-20-68

P. O. BOX 168  
507 INDUSTRIAL ROAD  
MARSHALL, MICHIGAN 49068

PHONE (616) 781-4241